

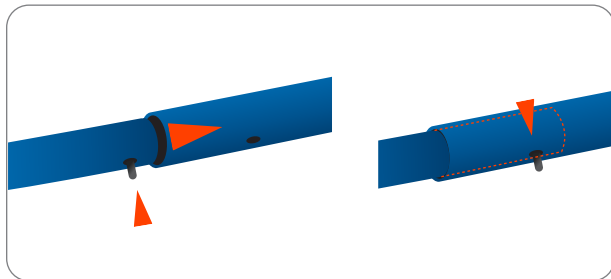



1

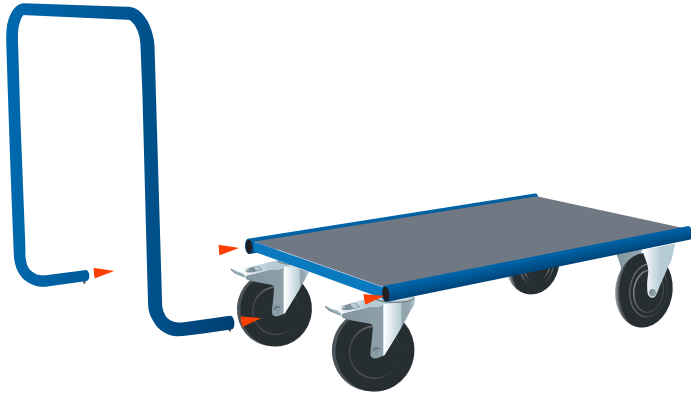

2

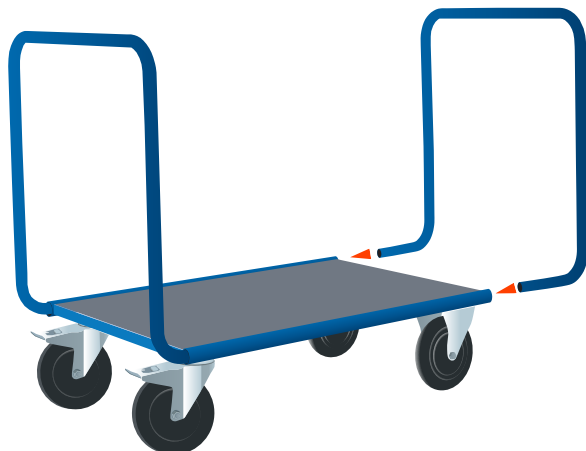

3

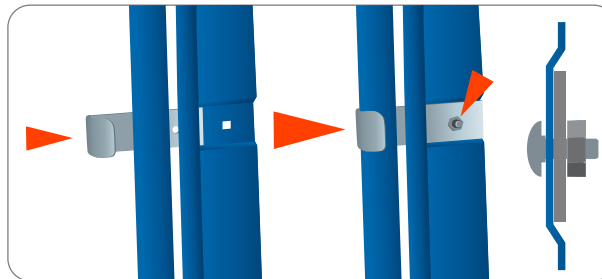

4



1 - 2. Slide the end panels into the tubes on the parcel cart base, pushing the metal nipples up to allow the panels to feed in slide until it locks in place. All types of end panels work in the same principle.

3 - 4. If using side panels - position the side panels between the two end panels, using metal clips provided slide the flat part into the allocated slot on the side panel whilst the end clips around the end frame tube, fix with nut and bolt provided.

Parcel cages work in exactly the same principle as the platform trolleys.

Tools Required

Spanner 10mm

Safety Precaution

Two competent people wearing **safety gloves**, **safety shoes** and **protective eyewear** are recommended to undertake the assembly.

Loading Capacity: up to **500kg**



scan for more info